


WOOD TILE & PEDESTAL APPLICATION


TRANSITION, ALIGNMENT & LOCK DOWN DETAILS

National Distribution
Toll Free: 888-380-5575


Tel: 213-380-5560 Fax: 213-380-5561

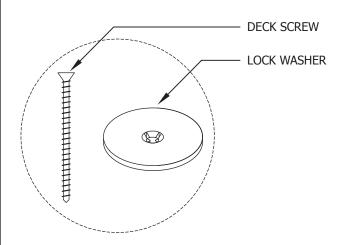

INSERT THE LOCK WASHER IN TO THE KURF CUT BETWEEN THE UPPER SLAT AND BOTTOM RAIL OF 3 WOOD PAVERS. INSERT THE 4th PAVER IN TO THE 4TH CORNER. ONCE ALL 4 PAVERS ARE TIGHTLY IN PLACE INSERT SCREW THROUGH LOCK WASHER AND HAND TIGHTEN IN TO PEDESTAL TOP UNTIL ALL 4 PAVERS ARE SECURELY FASTENED TO THE PEDESTAL. DO NOT OVER TIGHTEN.

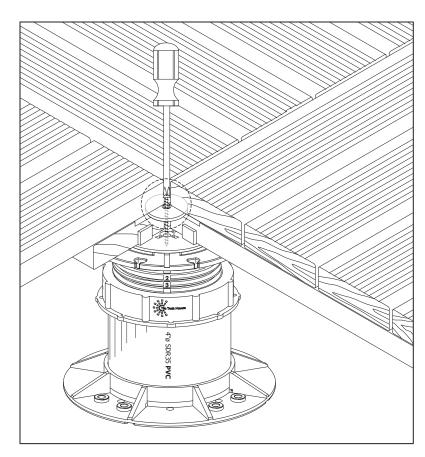

IPE WOOD & PAVER TRANSITION AND ALLIGNMENT

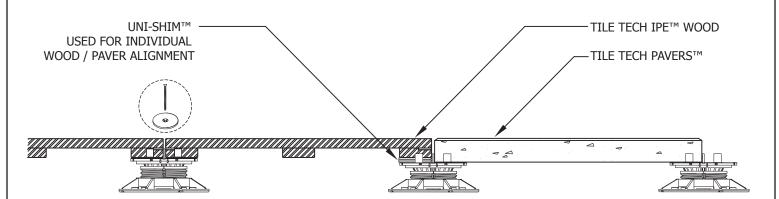

- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH TILE TECH PAVERS PRODUCT SPECIFICATIONS.
- 2. DRAWING NOT TO SCALE.
- 3. USE OF BUFFER PADS IS MANDATORY.
- 4. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.TILETECHPAVERS.com




IPE WOOD TILES DETAILS

20" x 20" x 1-1/2"

 National Distribution
 Tel:
 213-380-5560

 Toll Free: 888-380-5575
 Fax:
 213-380-5561

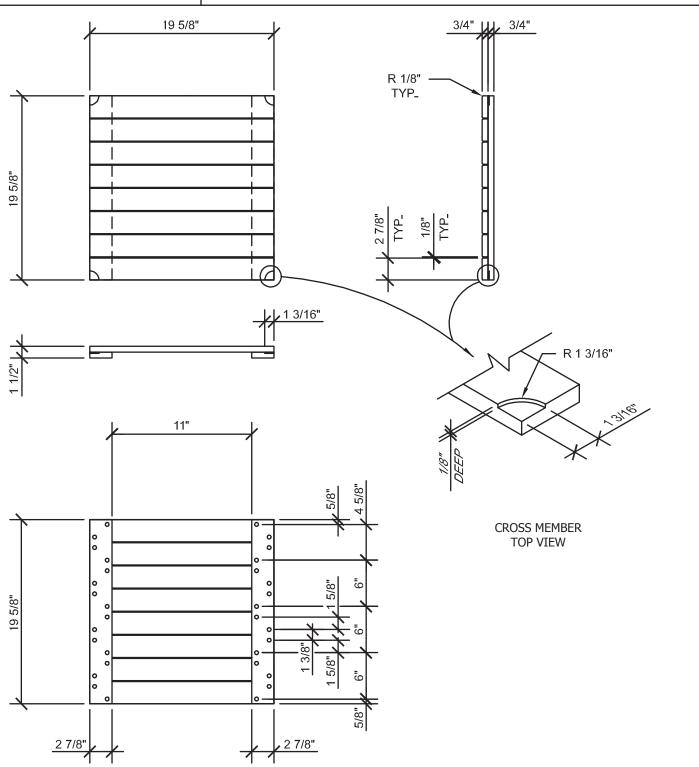


- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH TILE TECH PAVERS PRODUCT SPECIFICATIONS.
- 2. DRAWING NOT TO SCALE.
- 3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.TILETECHPAVERS.COM



IPE WOOD TILES DETAILS

 National Distribution
 Tel:
 213-380-5560

 Toll Free:
 888-380-5575
 Fax:
 213-380-5561

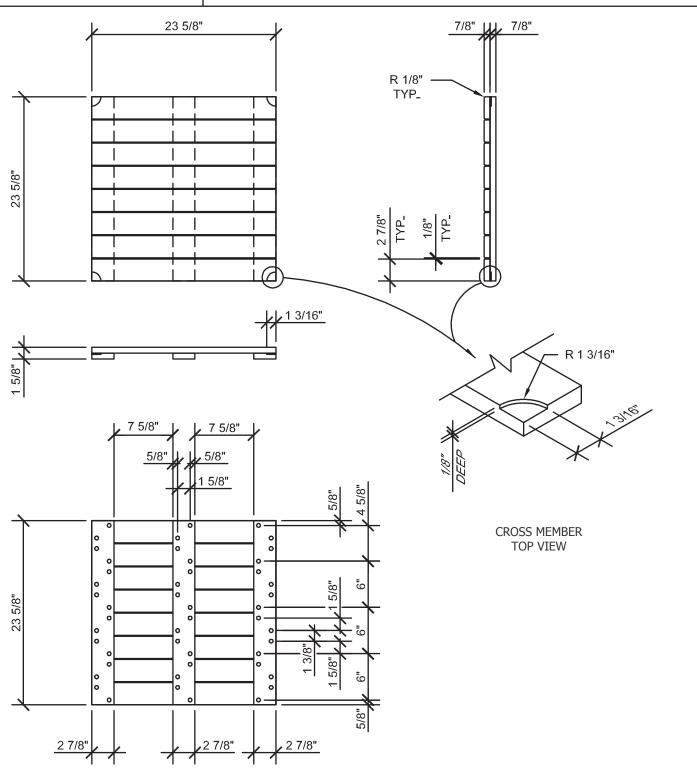


- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH TILE TECH PAVERS PRODUCT SPECIFICATIONS.
- 2. DRAWING NOT TO SCALE.
- 3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.TILETECHPAVERS.COM



IPE WOOD TILES DETAILS
24" x 48" x 1-5/8"

 National Distribution
 Tel:
 213-380-5560

 Toll Free:
 888-380-5575
 Fax:
 213-380-5561

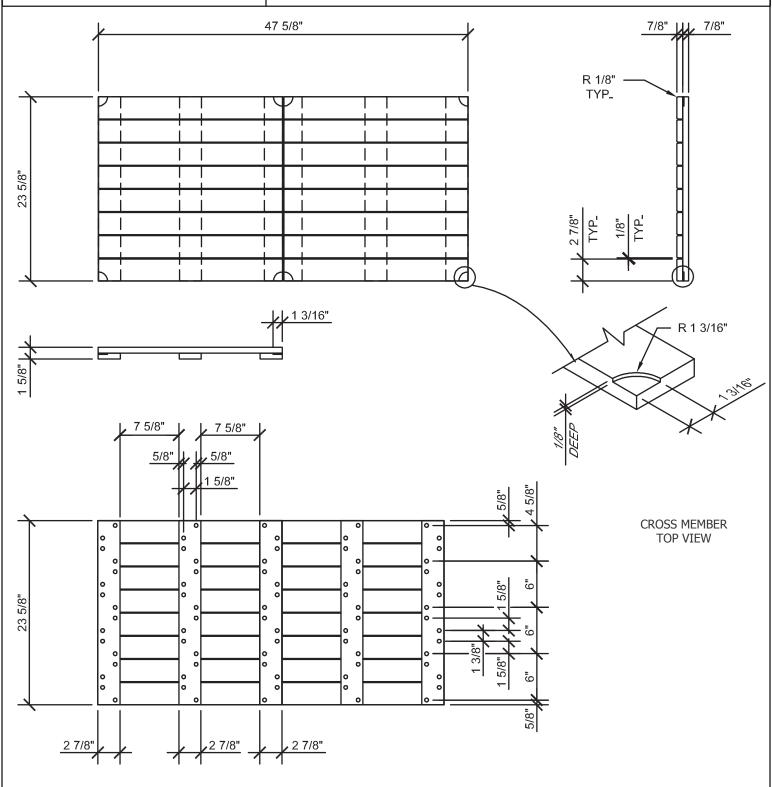

- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH TILE TECH PAVERS PRODUCT SPECIFICATIONS.
- 2. DRAWING NOT TO SCALE.
- 3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.TILETECHPAVERS.COM